

Appendix C – Autotest shortcut codes (AUS/NZ)

Autotests marked grey are available if SHORTCUT setup is set to BASIC. Refer to chapter 4.6.5 Shortcut Setup for more information.

Pre-programmed autotest sequences

		Portable or handheld												
Code No.	Class	Visual	Earth bond (1 st test)			Insulation			Substitute leakage	Leakage		Touch leakage		Polarity test
			Test current	Pass limit	Test duration	Test voltage	Pass limit	Test duration		Pass limit	Test duration	[mA]	[s]	
			[A]	[Ω]	[s]	[V]	[MΩ]	[s]		[mA]	[s]	[mA]	[s]	
001	2	☑	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
101	1	☑	10	1.00	5	500	1.00	3	☒	☒	☒	☒	☒	☒
103	1	☑	10	1.00	5	☒			☒	5.00m	5	☒	☒	☒
105	1	☑	10	1.00	5	250	1.00	3	☒	☒	☒	☒	☒	☒
107	1	☑	10	0.50	5	500	2.00	3	☒	☒	☒	☒	☒	☒
109	1	☑	10	0.50	5	☒			☒	3.50m	5	☒	☒	☒
111	1	☑	10	0.50	5	250	2.00	3	☒	☒	☒	☒	☒	☒
174	1	☑	100m	1.00	3	☒			☒	5.00m	5	☒	☒	☒
175	1	☑	100m	1.00	3	500	1.00	3	☒	☒	☒	☒	☒	☒
201	2	☑	☒			500	1.00	5	☒	☒	☒	☒	☒	☒
202	2	☑	☒			500	2.00	5	☒	☒	☒	☒	☒	☒
203	2	☑	☒			250	1.00	3	☒	☒	☒	☒	☒	☒
204	2	☑	☒			250	1.00	5	☒	☒	☒	☒	☒	☒
205	2	☑	☒			250	2.00	5	☒	☒	☒	☒	☒	☒
206	2	☑	☒			250	0.01	5	☒	☒	☒	☒	☒	☒
207	2	☑	☒			500	0.01	5	☒	☒	☒	☒	☒	☒
208	2	☑	☒			☒			☒	☒	☒	1.00	5	☒
209	2	☑	☒			☒			☒	☒	☒	0.50	5	☒
218	2	☑	☒			☒			☒	☒	☒	1.00	30	☒
219	2	☑	☒			250	10.00	3	☒	☒	☒	☒	☒	☒
220	2	☑	☒			500	10.00	3	☒	☒	☒	☒	☒	☒